


4-9 HEAD/CARRIAGE OFFSET ADJUSTMENT

1 Set the Ribbon, Vinyl Sheet and the pen to the machine.

4 **2** Turn on the power while pressing [◀], [▶] and [BASE POINT SET] keys.

3 Push the [SETUP] key.
Crop Mark will be printed and the **CARRIAGE** moves to Crop Mark printed on the right lower corner.

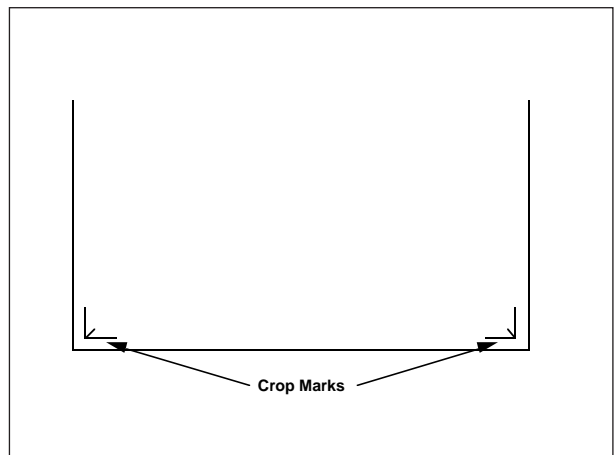

4 Move the **CARRIAGE** with cursor keys so that the pen tip will come right onto the corner of the right lower crop mark when pushing it down with your finger.
Push [SETUP] key to save the setting.

