

CX-24/12




Unpacking and Repacking

The illustrations in this manual depict the CX-24. Some details of the CX-12 differ from the figure.


★ How to Unpack the CX-24/12

The packings will be needed if you must repackage the product. Please do not throw them away.

1

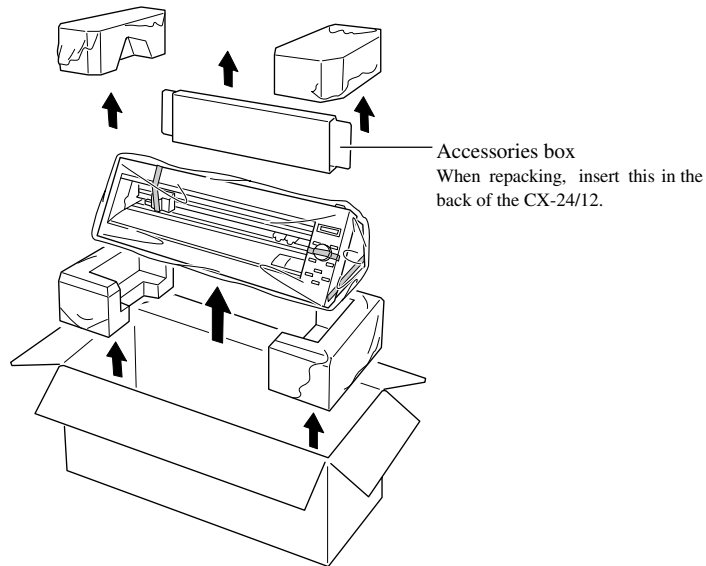


2 Front Surface

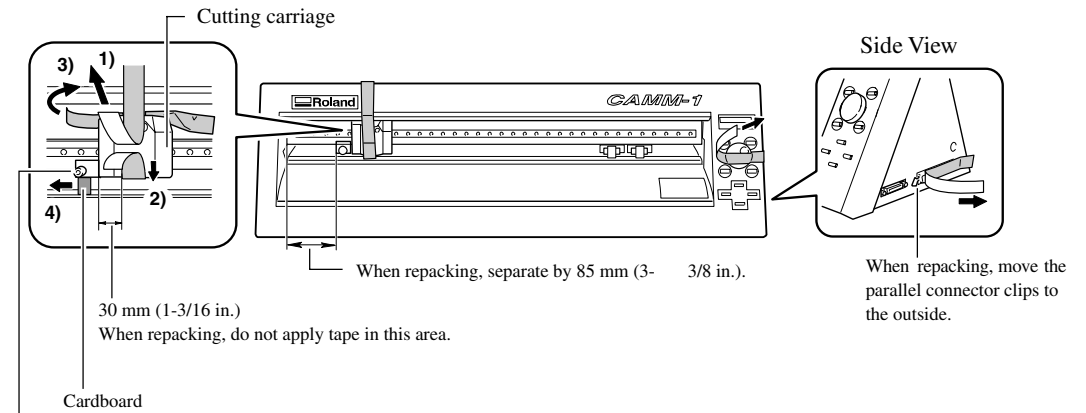

Turn the screw counterclockwise and remove the cardboard.

3 Rear

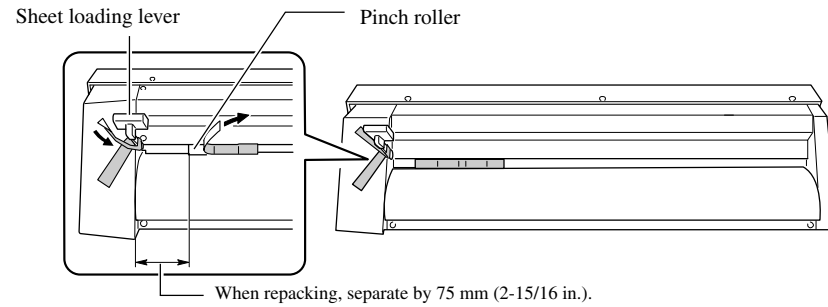

★ How to Repack the CX-24/12

Repack the machine in the reverse order of this procedure.