



# Adjusting Y-Center

1

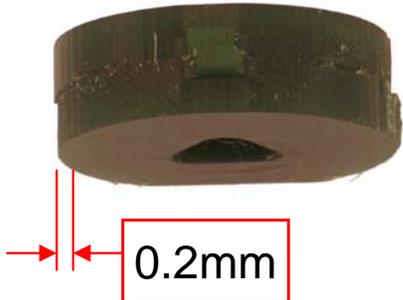


Measure the offset distance.

2

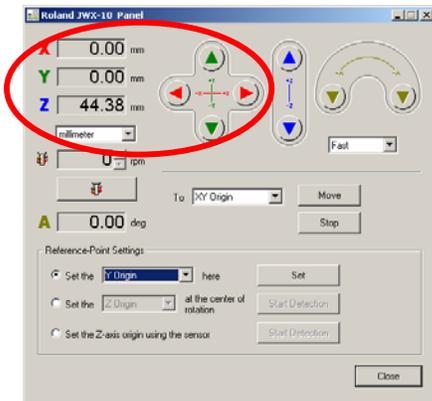


Move the tool to the X & Y Origin Position.

3

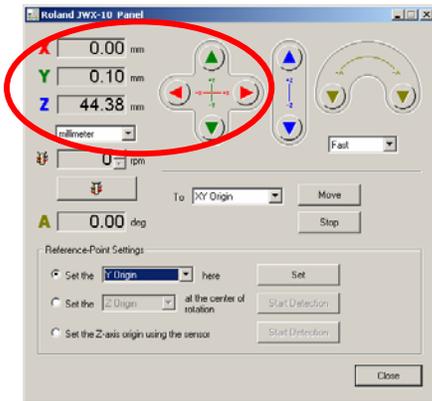

Move the tool half of the measured offset in the Y-direction only.

3

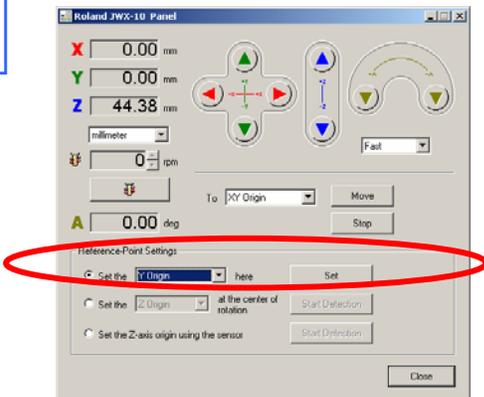

Set the Y-Origin at this location using the setting shown. After pressing the “Set” button, the Y-Origin will now read 0.00 mm.