

# Knowledge Base

MODEL: VesaCAMM	BULLETIN DATE: 9/02/05
BULLETIN NUMBER: FE-090205	AUTHOR: Sid Lambert
SUBJECT: Firmware Update Procedure	REVISION: Initial Release

## End User Firmware Update Procedure

The following steps allow end users to update their firmware using the new “Roland Firmware Updater”.

### Prerequisites

 
1. Download the “VersaCAMM X.X Firmware Updater” application, where X.X is the latest firmware, from <http://www.rolanddga.com>
2. Unzip the updater
3. Navigate to where the updater unzipped

### Preparing the printer

1. Turn OFF the printer by pressing the Sub-Power button on the front panel
  - a. The main power on the side of the machine will remain in the ON position
2. Hold the Up, Left and Down directional buttons down while pressing the Sub-Power button on the front panel
3. The printer will display “VERSION UP SURE?”, press the “ENTER” button on the panel
4. The printer will display now display “WAITING” and is ready to receive firmware


### Sending the firmware to the printer

1. Double click on the “Roland Firmware Updater” in the unzipped updater folder
  - a. For SP-300{V} machines select the SP-300{V} from the “Device” dropdown

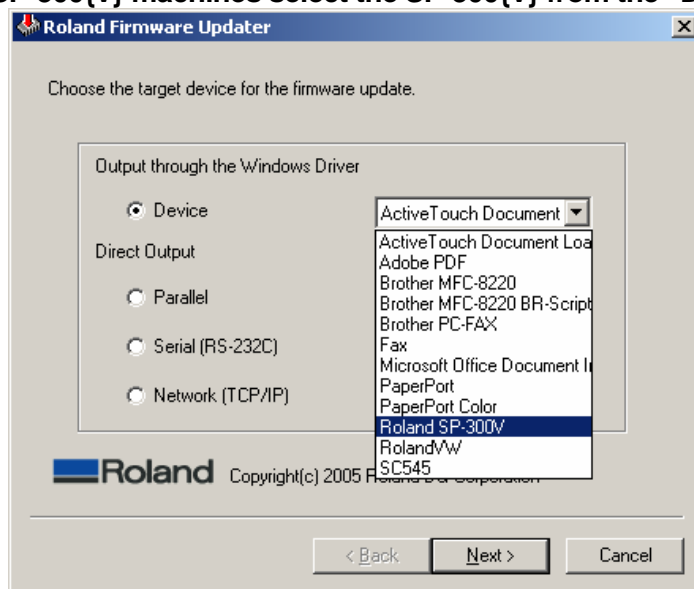


**Built with precision. Backed with passion.**

 **b. For SP-540V machines input the IP address of your printer**

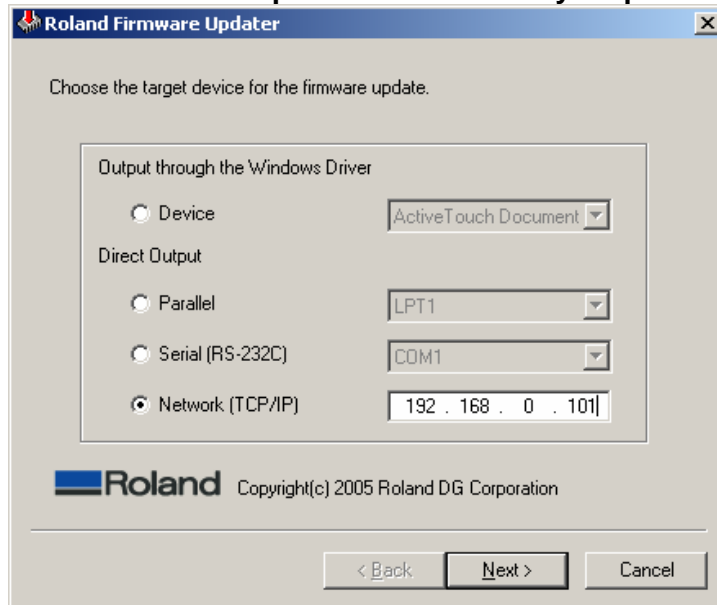

 2. Click on the “Next >” button
3. Read the important warnings in red
4. Click on the “Next >” button
5. Click “Yes” on the “This will upgrade your firmware. Continue?” dialog box

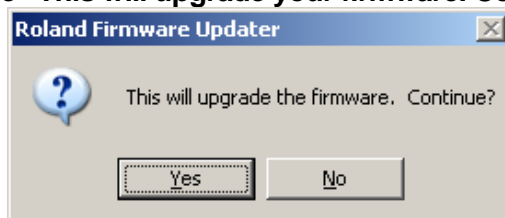

6. Wait until the printer displays “COMPLETE” on the LCD. It will beep when it is complete.
7. Click “Finish” on the Roland Firmware Updater

The firmware update is now complete. Please turn your printer back on normally.

**Built with precision. Backed with passion.**