


Support Bulletin: RASD-SB00028
Model: All Roland Products
Subject: Roland Dropout Utility Instructions
Date: 10/20/2006
Author: RR

Overview:


The Roland Dropout output utility (dropout.exe) is for use in outputting pre-ripped files (PRN & PLT formats) as well as firmware updates (RFX format) via the Windows environment and Roland Windows print driver.

Procedure:

1. Download the Dropout Utility from the Roland website (www.rolanddga.com/asd) under the support page for your product and extract the ZIP file.
2. Locate and launch the Dropout.exe utility.

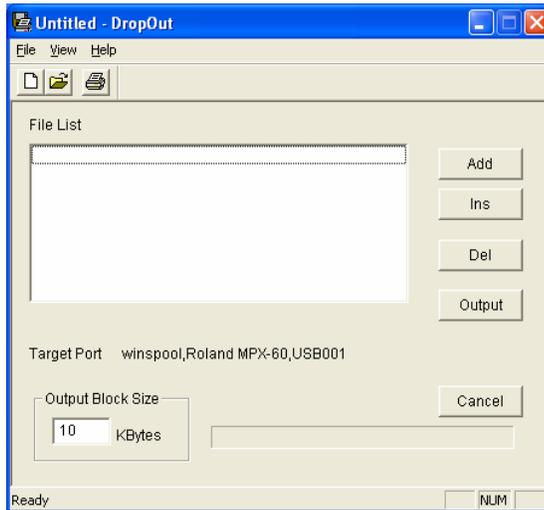


3. Click on File and Print Setup and ensure that the appropriate Roland Model number is selected and click OK.

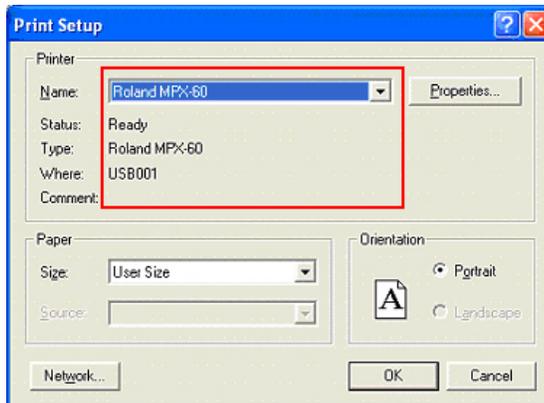

Support Bulletin: RASD-SB00028
Model: All Roland Products
Subject: Roland Dropout Utility Instructions
Date: 10/20/2006
Author: RR

4. In the Dropout window, click Add, then locate and select the PRN, PLT or RFW file and click Open.

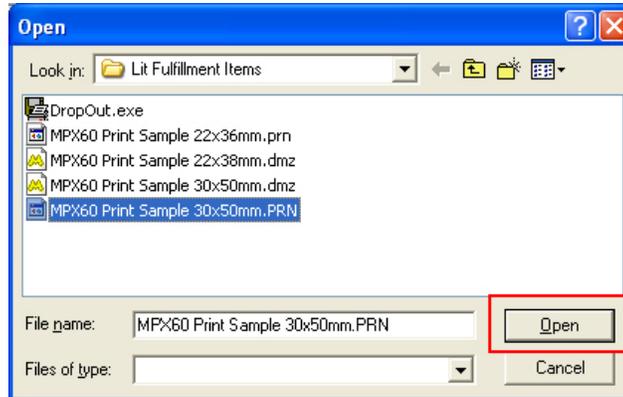

5. Ensure that the unit is configured properly for the file being sent (ie... EGX-300 Bed leveling Kit or EGX firmware download) and click Output to send the data to the Roland machine.

